
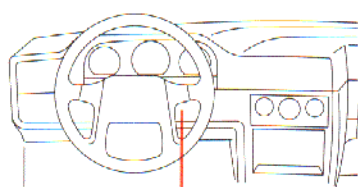
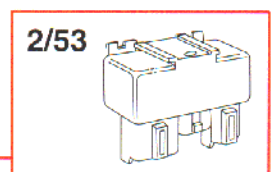
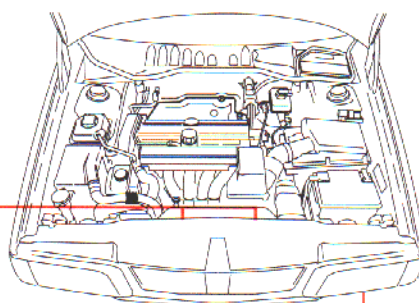
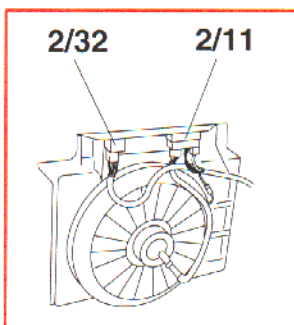
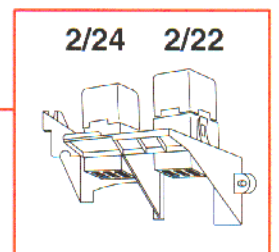
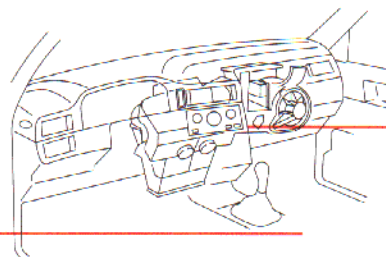
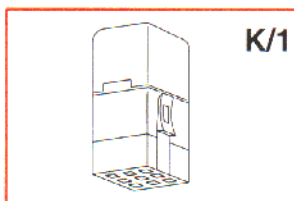
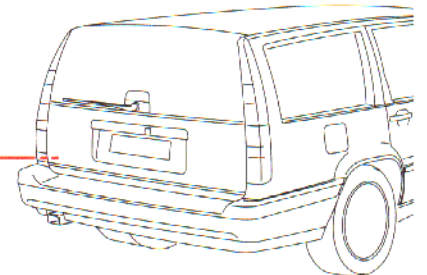
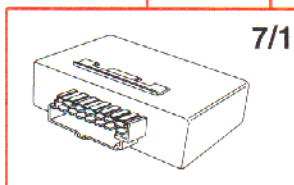
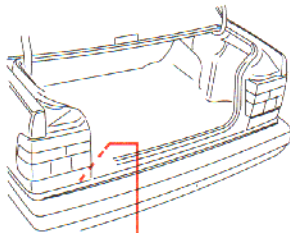
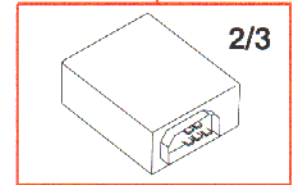


Location of relays outside the central electrical unit

- 2/3 DIM-DIP regulator
- 2/11 Engine cooling fan relay
- 2/22 A/C relay
- 2/24 Fan relay, max.
- 2/32 Main relay, fuel system
- 2/53 Relay, secondary air pump
- 7/1 Rear bulb failure warning sensor
- K/1 Relay, auto-down power window

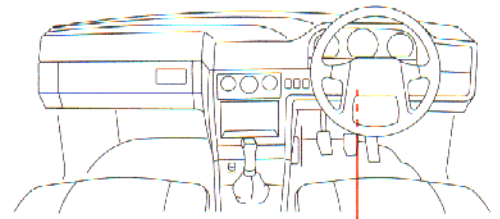

Ignition switch

Inputs

+30: two leads from battery positive terminal

Outputs

Key position::

- Key out

0 Off

I Radio

II Drive

III Start

Voltage at connection:

30

30, S

30, S, X

30, S, X, 15, 15I

30, S, 15, 50

